



### How To Connect The HV BEC +

Connect the labeled (1) port on the BEC to the Rx/FBL Battery In port. Connect the labeled (2) port on the BEC to any empty channel on the Rx/FBL. If using a Rudder Servo that requires 5v, connect (2) on the BEC to the Rx/FBL Rudder out port, then connect Rudder Servo to the labeled 5v port on the BEC. Connect to Power source (6s-14s). Select Output Voltage.

## CAUTION

DO NOT RUN A SEPERATE BATTERY OR CAPACITOR BANK PARALLEL WITH THE OUTPUT OF THE HV BEC +, THIS CAN CAUSE DAMAGE TO THE HV BEC + WHEN THE MAIN FLIGHT PACK IS DISCONNECTED.

DOING THE ABOVE WOULD VOID ANY AND ALL WARRANTY WITH THE HV BEC +. IF YOU HAVE ANY QUESTIONS, PLEASE CONTACT US...