


6s - 14s HV BEC Pro

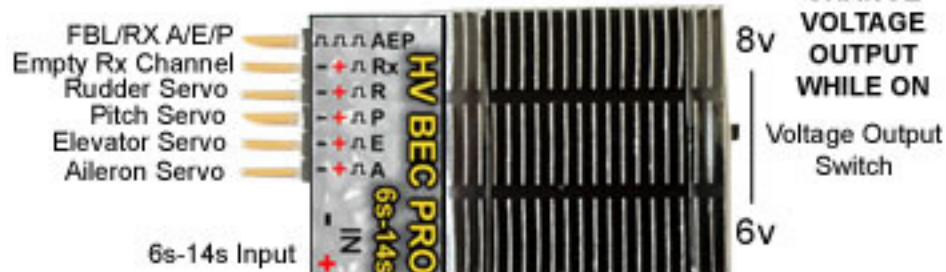

DO NOT
CHANGE
VOLTAGE
OUTPUT
WHILE ON

How To Connect The HV BEC Pro

Connect the Aileron, Elevator, Pitch and Rudder servos directly to the HV BEC Pro (labeled as R, P, E, A). Connect the included male to male servo extension from the Rx port on the BEC to any FBL/Rx empty channel. Connect the split cable from BEC (brown down), then connect the other ends to the FBL/Rx, brown-AILERON red-ELEVATOR orange-PITCH, channels.