

GLOW PLUG IGNITER



How To Connect The Igniter

Connect the included Male to Male Extension to any channel on your Rx and connect the other end to the **TOP** set of pins. Make note to follow the pin configuration. Connect Ground to Motor Case & Alligator Clip to Glow Plug. If using a Button Extension, connect to the **BOTTOM** set of pins. Make note to follow the pin configuration. To Ignite Glow Plug, simply press "START" for 10 seconds of Glow. Both Red LED's will light indicating Glow to Plug. If top LED is not on, Plug may be bad. Check connections or replace Glow Plug.